
TECHNICAL CHARACTERISTICS



			SQUASH	FOCUS
Total thickness	EN 428	mm	1.3	1.3
Thickness of the wear-layer	EN 429	mm	0.15	0.15
Weight / Mass per unit area	EN 430	g/m²	1105	1105
Width of sheet	EN 426	cm	200	200 / 300 / 400
Length of sheet	EN 426	ml	± 35	± 35
Surface treatment	-	-	Diamalite	Diamalite
Fire rating - Classification	EN 13501-1	class	C _{fl} -s1	B _{fl} -s1
Wear group	EN 653	group	T	T
Impact sound insulation	EN ISO 717-2	dB	12	10
Room impact noise	NF S 31074	class	Α	Α
Colour fastness	EN 20 105-B02	degree	> 6	> 6
Guarantee	-	years	5	5
VOC rate (French norm)	-	-	A+	A+
TVOC rate 28 days	-	µg/m³	< 100	< 100



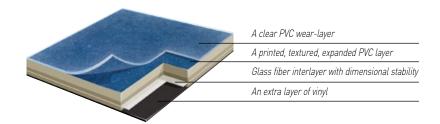

Areas of use: domestic













Diamalite is a special additive within the wear-layer that makes cleaning easier.

LAYING

Laying recommendations: Gerflor floorcoverings are high quality products developed for a long life.

Any warranty claim will only be considered if the product has been laid according to the following specifications:

The subfloor must be smooth, hard, dry and clean.

Unroll the floorcovering 24 hours before it is due to be installed.

During laying, the room temperature may not be below 18°C, and the ground temperature below 15°C.

Permanent installation/full stick:

Use a single stick acrylic glue (approx. 250 g/sq.m) Use a finely notched trowel and cold weld the joints.

Loose laying: Up to 20 sq.m area, the floor covering can be loose laid. Double sided adhesive tape should be used in entrances & under appliances such as fridges and dishwashers, and used along the joints for a perfect and invisible fit.

CLEANING & CARE

Initial cleaning: Before commencing a regular maintenance programme, an initial cleaning of the floor will be necessary to remove dirt accumulated during installation and other building works. Remove debris, sweep floor and vacuum to remove loose dirt. Wash floor with damp mop and bucket containing cold water and neutral detergent. Replace the water and solution if necessary. Remove stubborn marks with a non-abrasive pad.

Maintenance: Remove loose dirt with a broom or vacuum cleaner. Wash floor with damp mop and bucket with cold water.

Cleaning: Frequency of periodic maintenance will depend on the level of traffic and on the nature of the installation. Wash floor with damp mop and bucket containing cold water and neutral detergent.

Discoloration: All resilient floor covering can discolour due to the transference of colouring substances. Contact with bituminous materials, mastic, asphalt, oil, shoes with black rubber soles, or rubber rollers may cause discoloration.

